



KST1000
Shot Timer



User Guide

CONTENTS


Product Support	3
Getting To Know Your Shot Timer	4
Timer Screen	6
Review Screen	8
Settings Screen	9
Let's Get Started	10
Remove battery door and insert batteries.	10
Press the POWER button to turn the Timer on.	11
Press the GO button to start the timer.	12
Press the REVIEW button to view stored strings.	13
Press the SETTINGS Button to Adjust Settings.	14
Use the Sensitivity sub menu for additional sensitivity config.	18
Use the Device Settings sub menu for additional settings.	21
Check for firmware updates.	23
Use the Quick Review option.	25

Congratulations on the Purchase of Your KST1000 Shot Timer

For additional help, support videos, and answers to frequently asked questions, visit www.kestrelballistics.com/help or contact us at (800) 784-4221 Mon-Fri: 9am-5pm EST.

GETTING TO KNOW YOUR SHOT TIMER



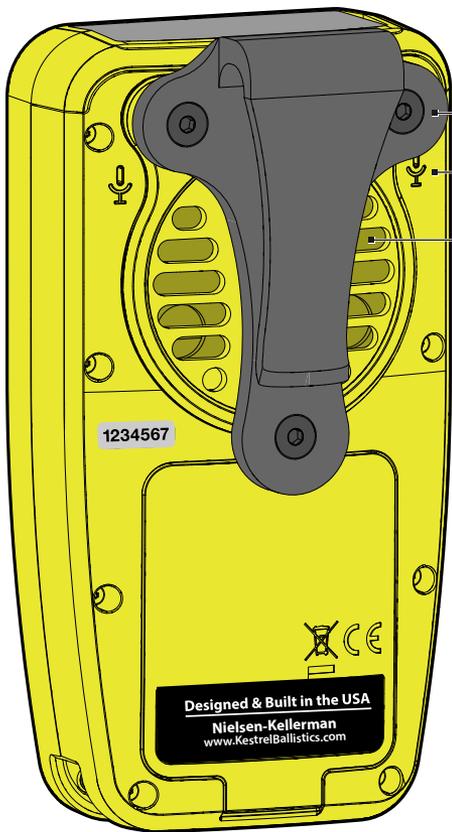

BELT CLIP

MICROPHONE


*Do not puncture Mic Membrane

BUZZER

TOP Display



TIMER SCREEN

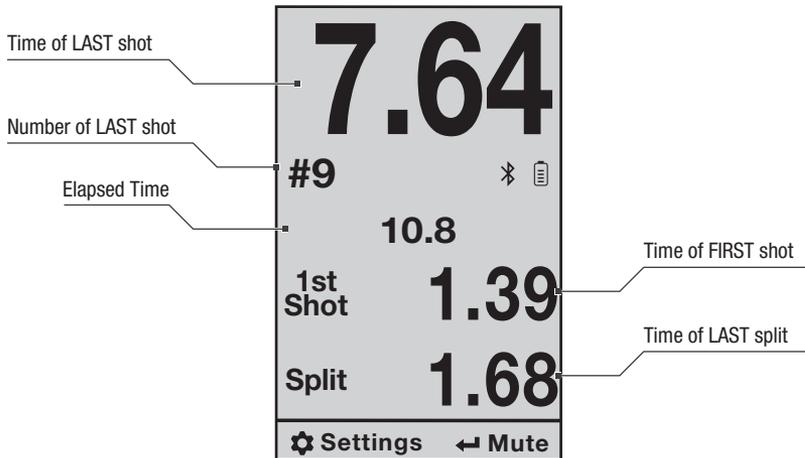

Button	Timer Screen Function
	Start Timer
	Enter REVIEW
	Enter SETTINGS
	Mute (Pause) On / Off
	Backlight On / Off
	Quick Review Shots
	Adjust Sensitivity

REVIEW SCREEN

Times/Splits Indicator

Change in Settings

Shots

Scroll down to view more

Strings

Scroll right to view more

Times	5	4	3	▶
Last	2.98	2.02	3.06	
1	1.45	1.95	1.42	
2	1.62	2.11	2.06	
3	2.35	2.02	2.38	
4	2.41	--	2.48	
5	2.98	--	3.06	
6	--	--	--	
7	--	--	--	
8	--	--	--	
9	--	--	--	
10	--	--	--	
11	--	--	--	

Settings ← clear

Clear

Clear all saved strings information on REVIEW screen.

Button	Function
	Start Timer
	Exit Review
	Enter Settings

Button	Function
	View Times
	Backlight On / Off
	Execute Command / Enter Sub Menu

SETTINGS SCREEN

Menu Field

"..." Indicates a Sub Menu -
Press Select to Enter

Name...	PRESET 1
Sens...	3-22LR
Start Delay	2.5 sec
Random	2.5-3.5 sec
1st Par...	Off
2nd Par...	Off
3rd Par...	Off
Start Loop	Off
Buzzer Volume	Low
Review	Time
Device Settings...	
Diagnostics...	
exit	adjust

Setting/Option

Toggle Left/Right
to change

Scroll Down/Up Arrow

Indicates more options
offscreen


Button	Function
	Start Timer
	Enter Review
	Enter Settings / Exit Sub Menu
	Toggle Setting

Button	Function
	Scroll to Setting
	Execute Command / Enter Sub Menu
	Backlight On / Off

LET'S GET STARTED


1 Remove battery door and insert batteries.

Timer runs on two CR123 batteries.

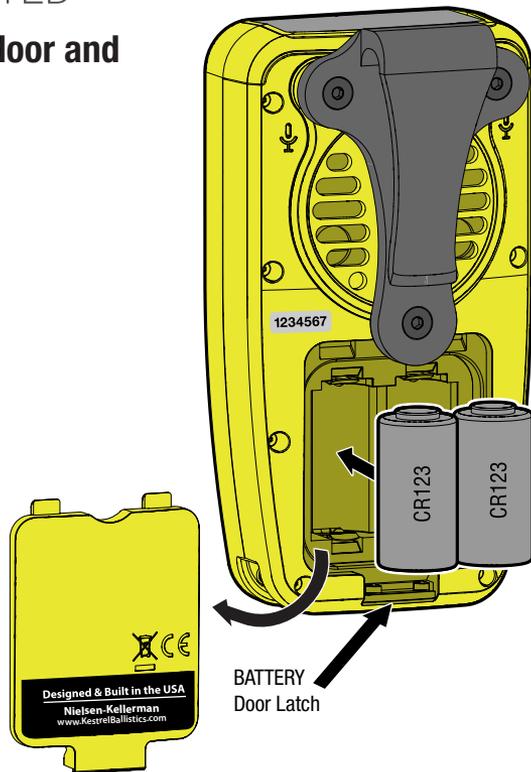

2 Press the **POWER** button to turn the Timer on.

To turn the timer off, press the **POWER** button and hold for 2 seconds.

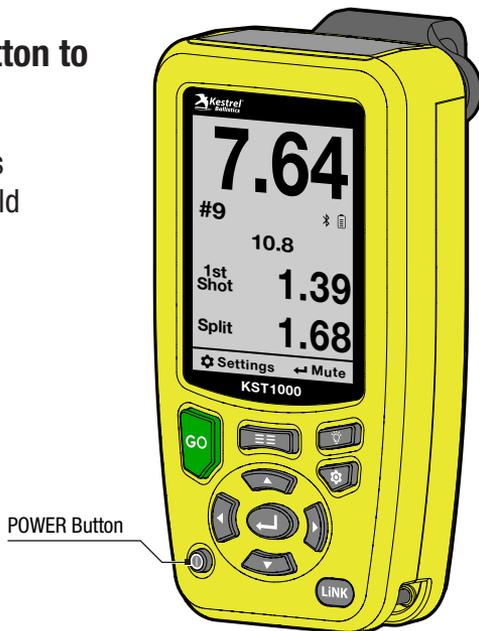


3 Press the GO button to start the timer.

Press the **GO** button to display the Timer screen. The buzzer will sound to indicate that the Shot Timer has started to record a new string.

"0.00" will flash on the screen until the Shot Timer hears the first shot.

If you have entered settings for **Delay** or **Random** in the **Settings** menu, the Shot Timer will use that setting as the countdown to the buzzer. If you enter settings for both, the Shot Timer will combine the two values to create the countdown.

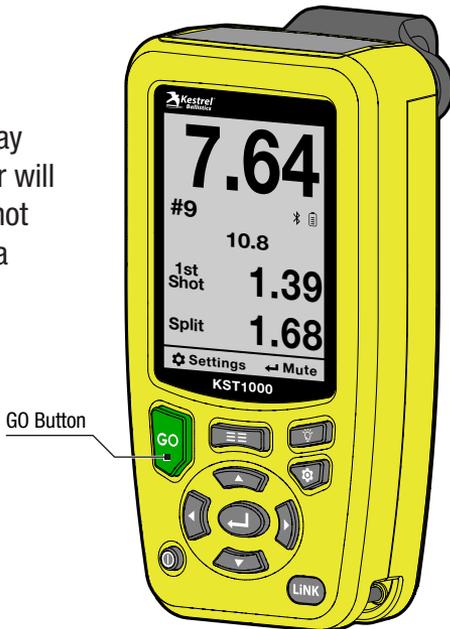

4 Press the REVIEW button to view stored strings.

In the **Settings** menu, set the Review setting to **Times** or **Splits**.

Times displays the interval between the sounding of the buzzer and the shot.

Splits displays the interval between the listed shot and the previous shot.

The Shot Timer can store up to 50 strings. After 50 strings have been recorded, each new string replaces the oldest stored string, which is deleted.

Use the **Clear History** command in the **Device Settings** menu to clear the **Review** screen.

Times	5	4	3	▶
Last	2.98	2.02	3.06	
1	1.45	1.95	1.42	
2	1.62	2.11	2.06	
3	2.35	2.02	2.38	
4	2.41	--	2.48	
5	2.98	--	3.06	
6	--	--	--	
7	--	--	--	
8	--	--	--	
9	--	--	--	
10	--	--	--	
11	--	--	--	
⚙ Settings		← clear		

5 Press the **SETTINGS** Button to Adjust Settings.

Scroll to a setting and push  to enter its sub menu.

An elipsis (...) indicates that an item has a sub menu.

Name...	PRESET 1
Sens...	3-22LR
Start Delay	2.5 sec
Random	2.5-3.5 sec
1st Par...	Off
2nd Par...	Off
3rd Par...	Off
Start Loop	Off
Buzzer Volume	Low
Review	Time
Device Settings...	
Diagnostics...	

 exit   adjust


- Name** The name of the selected Preset.
- Sensitivity** The Shot Timer's sensitivity setting. This is the noise level required for the Shot Timer to register a shot. The Sensitivity line will blink when the Shot Timer registers a shot at the current setting, allowing you to test and set your preferred level.
Note: Additional sensitivity customizations can be made in the Sensitivity sub menu.
- Start Delay** A fixed time delay between when you press the **GO** button and when the buzzer sounds.
- Random** A random time delay between when you press the **GO** button and when the buzzer sounds.
Note: When they are both set, the **Start Delay** and **Random Start** values combine to create a total delay time.

- 1st Par** The time between the Go signal and a second buzzer, indicating the end of the 1st Par time.
- 2nd Par** The time between the Go signal and an additional buzzer, indicating the end of the 2nd Par time.
- 3rd Par** The time between the Go signal and an additional buzzer, indicating the end of the 3rd Par time. (Follow-on Par times are locked if previous Par times are set to Off.)
- Start Loop** The timer automatically restarts when the set LOOP time elapses. Used for repetitive hands-free training. The loop will automatically end if any button is pressed or after 30 loops.
- Buzzer Volume** High volume is appropriate for outdoor use. Medium or Low are intended for dryfire or indoor use.

- Review** The type of records viewable on the REVIEW screen. The REVIEW screen displays either Time (the interval between the sounding of the buzzer and the shot) or Splits (the interval between the listed shot and the previous shot).
- Device Settings** Additional settings for setting up your Shot Timer.
- Diagnostics** Advanced settings tuning and troubleshooting.

6 Use the Sensitivity sub menu for additional sensitivity configuration.

This screen can be used to fine tune each sensitivity level to fit your desired use. Settings apply to each sensitivity level individually. The default values for each level should be treated as a reasonable starting point for the listed firearm type.

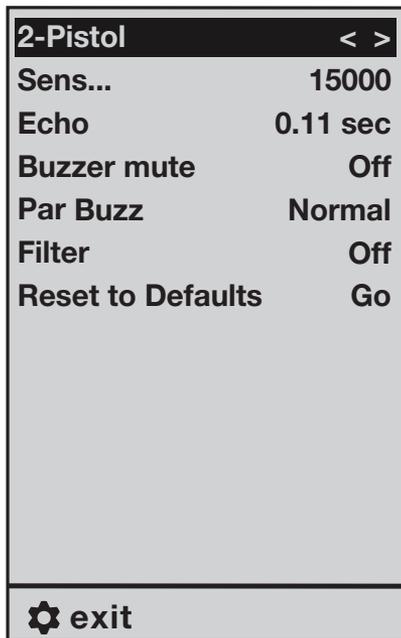

- Sens...** The Shot Timer's sensitivity threshold. This is the noise level required for the Shot Timer to register a shot. The top preset line will blink when a shot is registered at the current setting, allowing you to test and set your preferred level. For quieter shots, lower this value; for louder shots, raise this value.
- Echo** The amount of time after a shot is recorded during which the timer ignores any follow-on sounds. This avoids recording echoes off berms or walls as shots. To help you calibrate Echo accurately, after a shot is recorded, the Shot Timer will display 1 Shot if it heard 1 shot or 2+ Shots if it heard two or more. You can then set (adjust?) the Echo time accordingly.
- Buzzer Mute** If selected to On, the Shot Timer will not listen for shots while the start buzzer is active. The "+__" value will add additional time during which the microphone will not listen for shots. This can be helpful if the buzzer is configured with an extremely low sensitivity setting. This does not affect the Par buzzer.

Par Buzz

In Quiet mode, the Par buzz will fire (sound?) at a Low volume level instead of the level selected with the Buzzer Volume control in the main menu.

Filter

A frequency filter will be applied to measured sounds. This will impact sensitivity settings and is not recommended for general use.

Reset to Defaults

Resets the sensitivity settings for only the currently shown preset. They are returned to the factory default settings. This will not affect sensitivity settings beyond those currently displayed.

7 Use the Device Settings sub menu for additional settings.

An elipsis (...) indicates that an item has a sub menu.

Elapsed Time	Off
Bluetooth	On
Auto Shtdwn	15 min
Clear History	Go
Factory Restore	Go
About...	
 exit ◀▶ adjust	

- Elapsed Time** Displays a counter on the Timer Screen that shows the elapsed time since the buzzer sounded.
- Bluetooth** Turns Bluetooth on or off.
Continuous use will have a small impact on battery life.
- Auto Shutdown** The amount of time without a button press until the timer turns off. Recording a shot will not restart the auto shutdown time.
- Clear History** Use the **Clear History** command in the **Device Settings** menu to clear the **Review** screen.
- Factory Restore** Resets all presets, settings and Review History to factory conditions.
- About** Displays device information such as firmware version, serial number and more...

8 Check for firmware updates.

Note: A good rule of thumb is to check for updates once a year. You can also follow us on Kestrel Ballistics social media to get the newest update announcements.



1. Download the **Kestrel LiNK Ballistics** app on your mobile device.




2. On your phone and your Shot Timer, ensure **Bluetooth** is enabled.
 - a. Go to the **Settings** screen and press Select.
 - b. Highlight Bluetooth and make sure it is turned **On**.

3. With Bluetooth enabled, open the **Kestrel LiNK Ballistics** app on your device.


4. On the **Kestrel LiNK Ballistics** screen, select **Connect Device**.

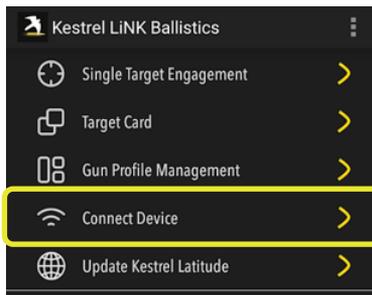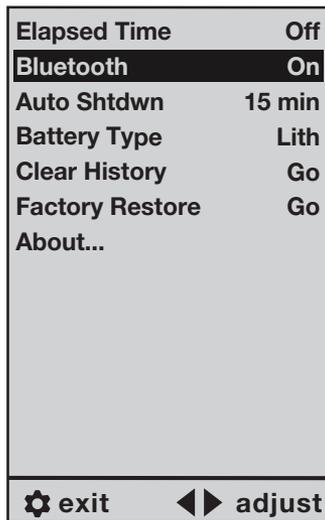


5. On the **Available Devices** screen, select your Shot Timer. The app automatically checks for firmware updates. If new firmware is available, the app will ask you if you want to update.

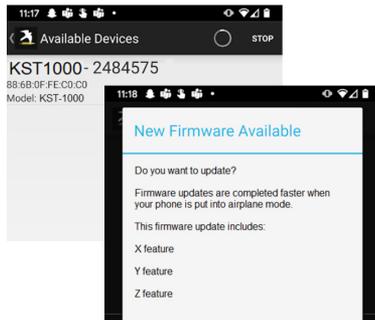

6. Select **Update**.

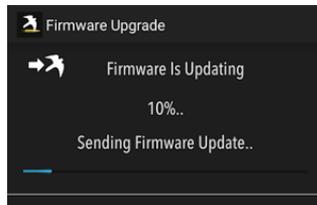

7. The app tells you when the update is complete.

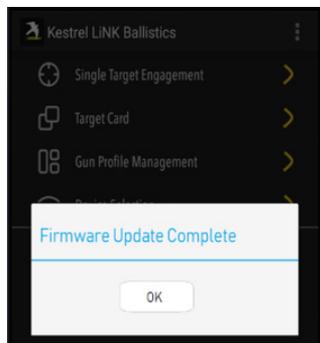


9 Use the Quick Review option.

On the **TIMER** screen, you can quickly review your times, without having to navigate to the **REVIEW** screen.

On the **TIMER** screen, press the **Left** or **Right** button.

This will cycle through the shots in the current string.

For instance, starting at shot #9 and pressing on the **LEFT** button brings you to the previous shot, #8. Pressing again brings you to shot #7.

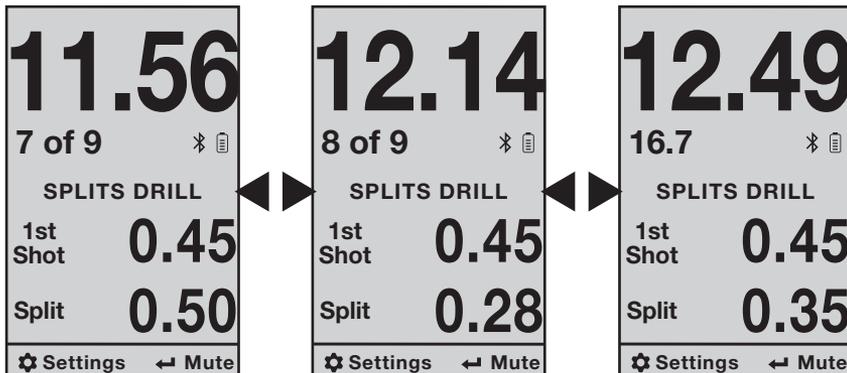



**PROUDLY DESIGNED
AND BUILT IN THE USA**



[KestrelBallistics.com/kestrel-plain-language-warranty](https://www.kestrelballistics.com/kestrel-plain-language-warranty)

Manufactured and Distributed by:

Nielsen-Kellerman
21 Creek Circle, Boothwyn, PA 19061
Phone: (610) 447-1555
www.nkhome.com
319073_0_22.06.23

Contact us at:

(800) 784-4221 Toll Free North America
Email: techsupport@kestrelballistics.com
[Facebook.com/kestrelballistics](https://www.facebook.com/kestrelballistics)
Instagram: [@KestrelBallistics](https://www.instagram.com/KestrelBallistics)
YouTube Channel: [Kestrel Ballistics](https://www.youtube.com/KestrelBallistics)